

48002307

AFN
acessórios 4x4



Checklist / Manual de Montagem - Base de guincho p/ P. Choques Original - Toyota Hilux Revo



Checklist / Fitting Instructions - OEM winch mount - Toyota Hilux Revo











Despiezas / Instrucciones de montaje -



2h



1 x1 47001740  <input type="checkbox"/>	2 x1 47001739  <input type="checkbox"/>	3 x4 46006522  <input type="checkbox"/>	4 x1 46006520  <input type="checkbox"/>
5 x1 46006519  <input type="checkbox"/>	6 x1 46006518  <input type="checkbox"/>	7 x1 46006517  <input type="checkbox"/>	8 x1 46005518  <input type="checkbox"/>
9 x6 45000266 Prf.S.R.P.M12x90x35 <input type="checkbox"/>	10 x4 45000104 Prf. Sx. M12x30x1,25 <input type="checkbox"/>	11 x6 45000066 Fêmea Freiada M12 <input type="checkbox"/>	12 x16 45000036 Anilha Aba Larga M12 <input type="checkbox"/>
13 x10 45000017 Fêmea Freiada M10 <input type="checkbox"/>	14 x24 45000010 Anilha Aba Larga M10 <input type="checkbox"/>	15 x10 45000007 Prf.Cb.Sx.M10x30x1,5 <input type="checkbox"/>	

Toyota Hilux Revo
(2015-)

Acessórios: ___ / ___ / ___ | Peças/Compostos: ___ / ___ / ___ | Artigo: ___ / ___ / ___ | Embalagem: ___ / ___ / ___

Thank you for choosing AFN products, a lot of time in R&D has gone into perfecting our products. However, if you find problems with any AFN products you have purchased, or if you have any information which would help us to improve our products, please let us know.

If you think there may be a problem either before or after fitting the AFN product, it is best to contact your nearest AFN distributor.

WARNING

- This product should be installed as demonstrated in the product fitting instructions.
- If verified that any component is damaged, please contact your nearest AFN distributor.
- The specified parts, will only fit the models specified by AFN.
- Do not modify any component of the product.
- It is recommended that this product is installed by specialised and trained personnel.
- AFN cannot be responsible for any changes made by the vehicle manufacturer.
- Work safely and use specialised tools at all times.
- Always use protective gear.



size	Torque Nm	Torque lbft
M6	9Nm	4 lbft
M8	22Nm	16 lbft
M10	44Nm	32 lbft
M12	77Nm	57 lbft

- Tools set required:



CONTACTS

R. da Madeira, nº 113
Z. Industrial das Travessas
3700-176 S. João da Madeira
Portugal

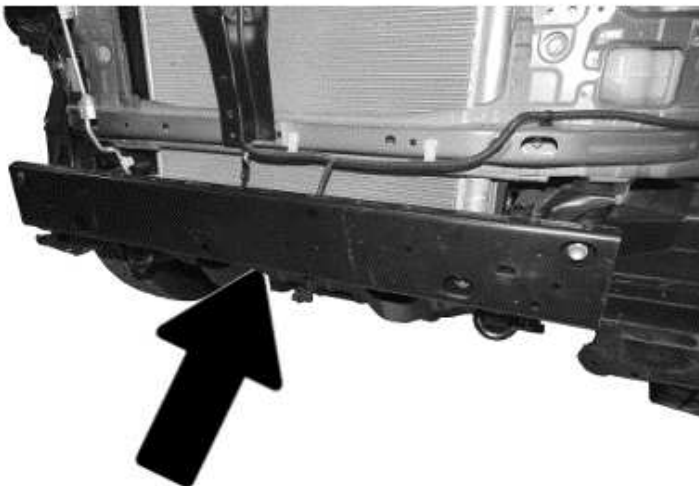
Tel.: (+351) 256 838 300
Fax: (+351) 256 838 305
www.afn.pt
geral@afn.pt

COORDINATES

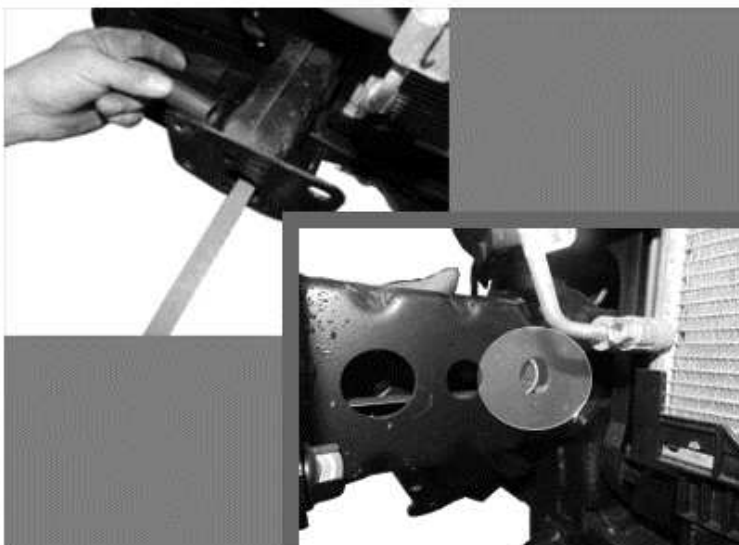
DATUM: European 79
UTM 05.44.100
29T 45.28.300
N 40°54' 14.0"
W 08°28' 35.0"

01

- Remove the OEM bumper and skid plate.

02

- Remove the OEM parts.

03

- Insert part number 46006522 inside the chassis frame.

04

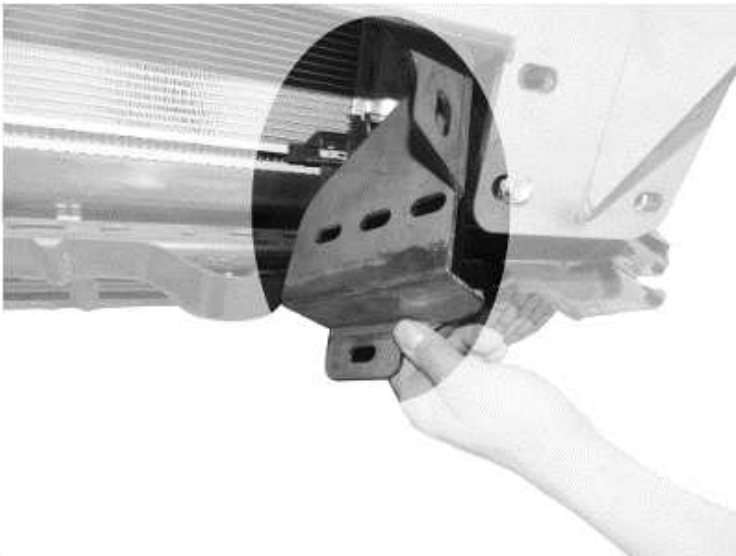
- Fit part number

1 - 46006517 (left side)

2 - 46006518 (right side)

- Bolts needed

1 - 45000036 / 45000266

05

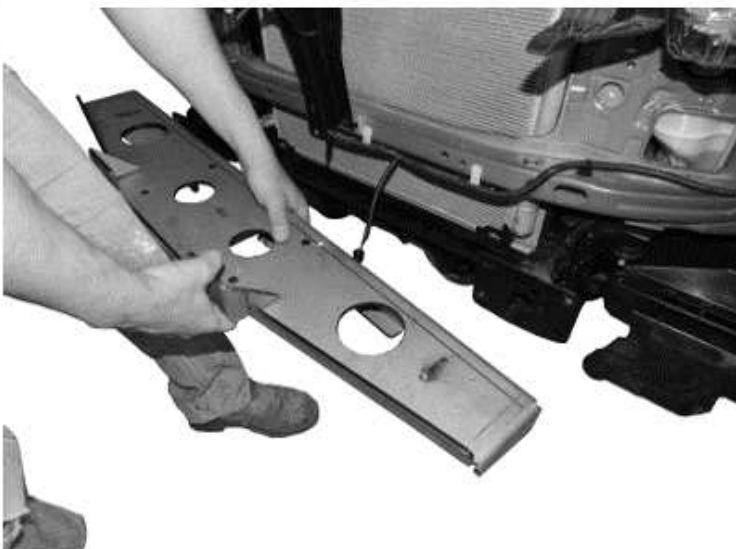
- Fit part number

1 - 46006519 (left side)

2 - 46006520 (right side)

- Bolts needed

1 - 45000036 / 45000066

06

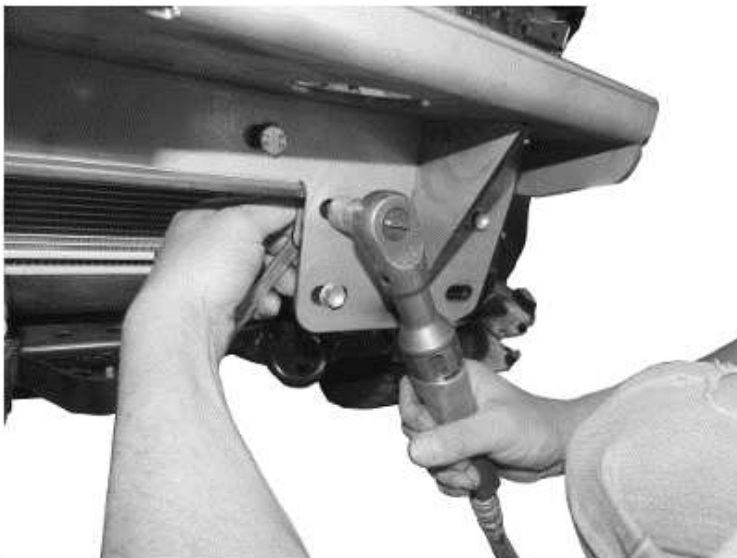
- Fit part number

1 - 47001739

07

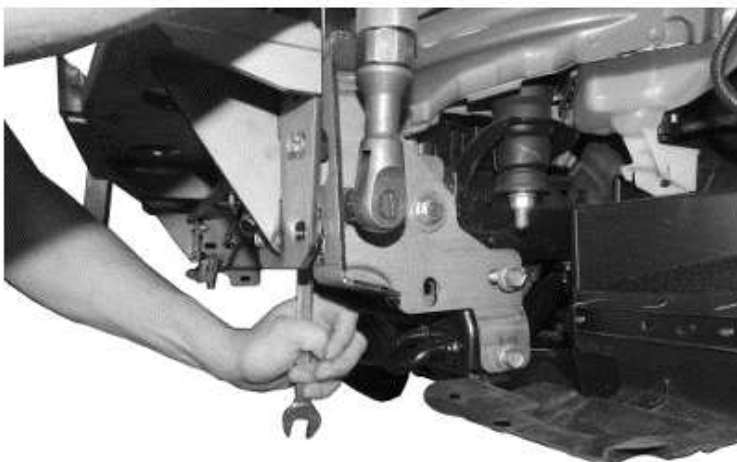
- Bolts needed

1- 45000010 and original bolt

08

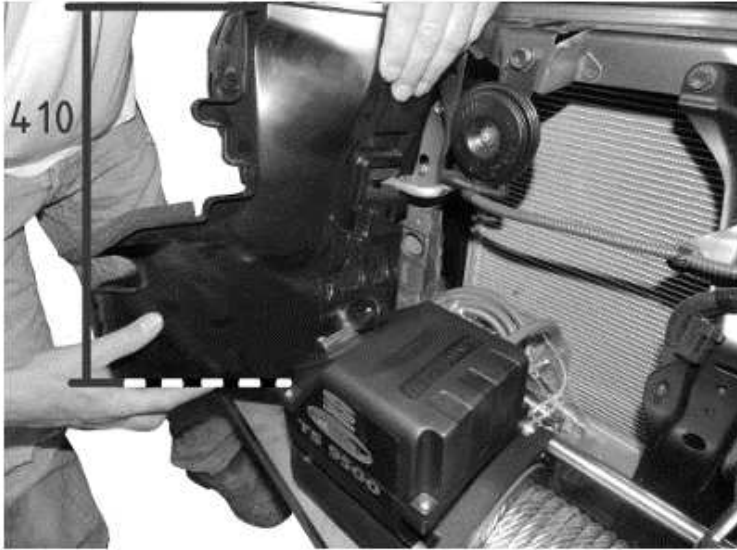
- Bolts needed

1- 45000007 / 45000010

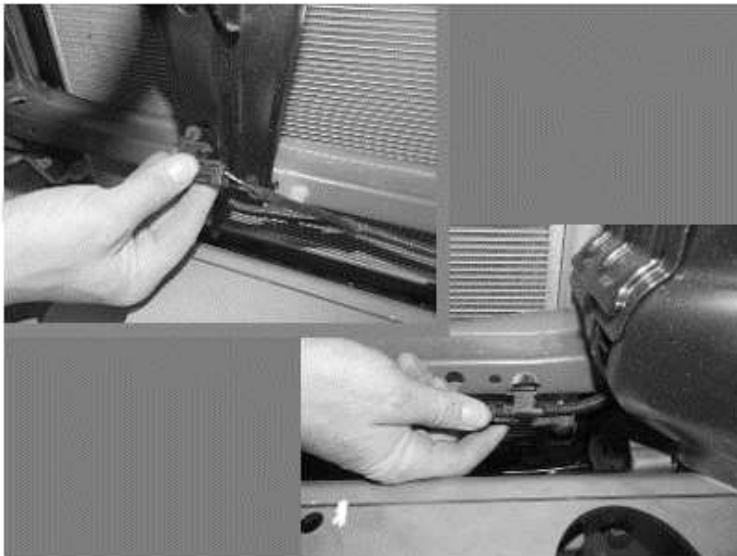
09

- Bolts needed

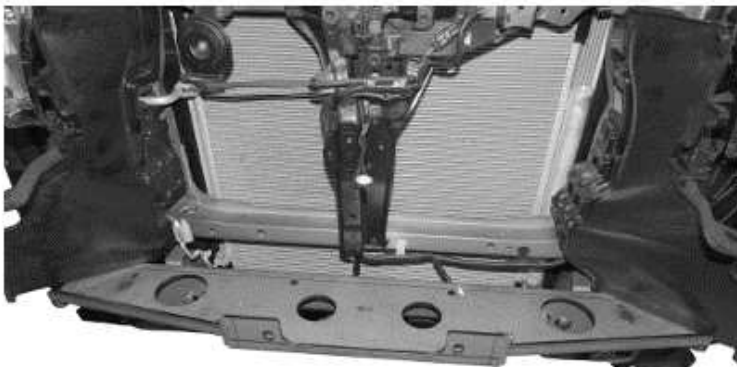
1- 45000007 / 45000010 /
45000036 / 45000104 / 45000266

10

- Cut the bottom part of the OEM deflector, 410mm from top to bottom.

11

- Replace the OEM sensor.

12

13

- Fit part number

1 - 47001740

- Bolts needed

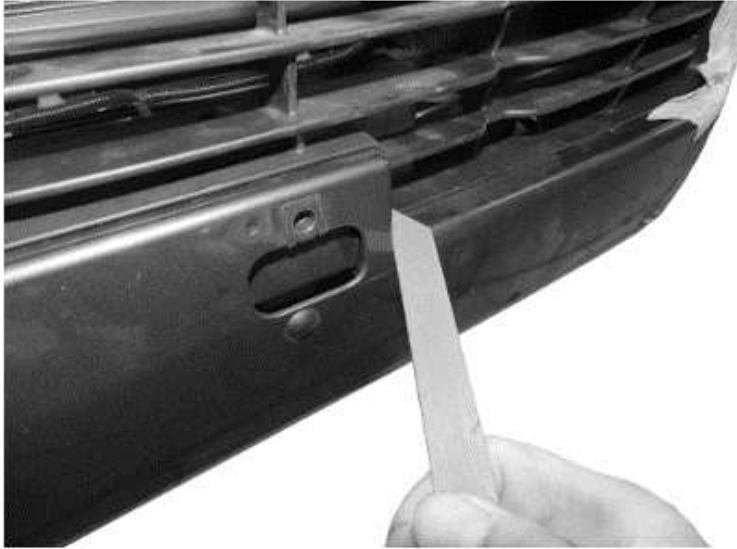
1 - Original bolt

14

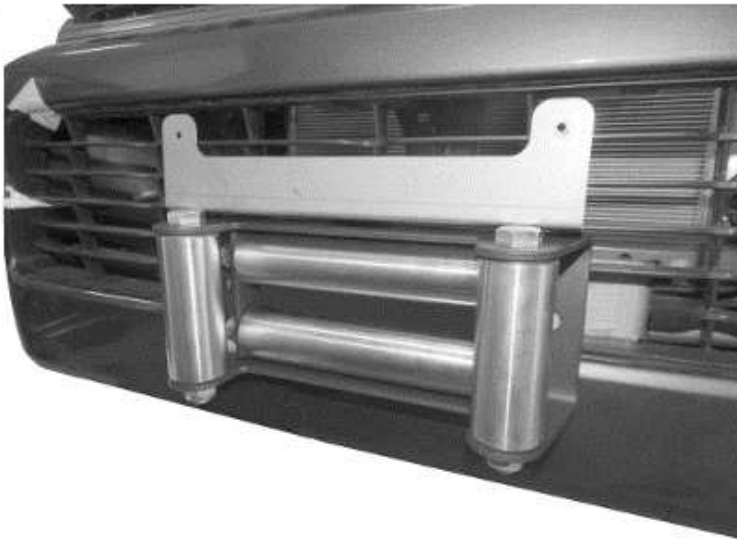
- Assembly OEM bumper.

15

- Cut the OEM bumper.

16

- The pictures 16 and 17 shows overall cuts. Please verify your winch dimensions before doing the intended cut.

17

- Fit part number

1- 46005518